



.:Montageanleitung.:Notice de montage.:Installation instructions.:Montážní návod.:

SPRCHOVÝ KOUT



CLC01

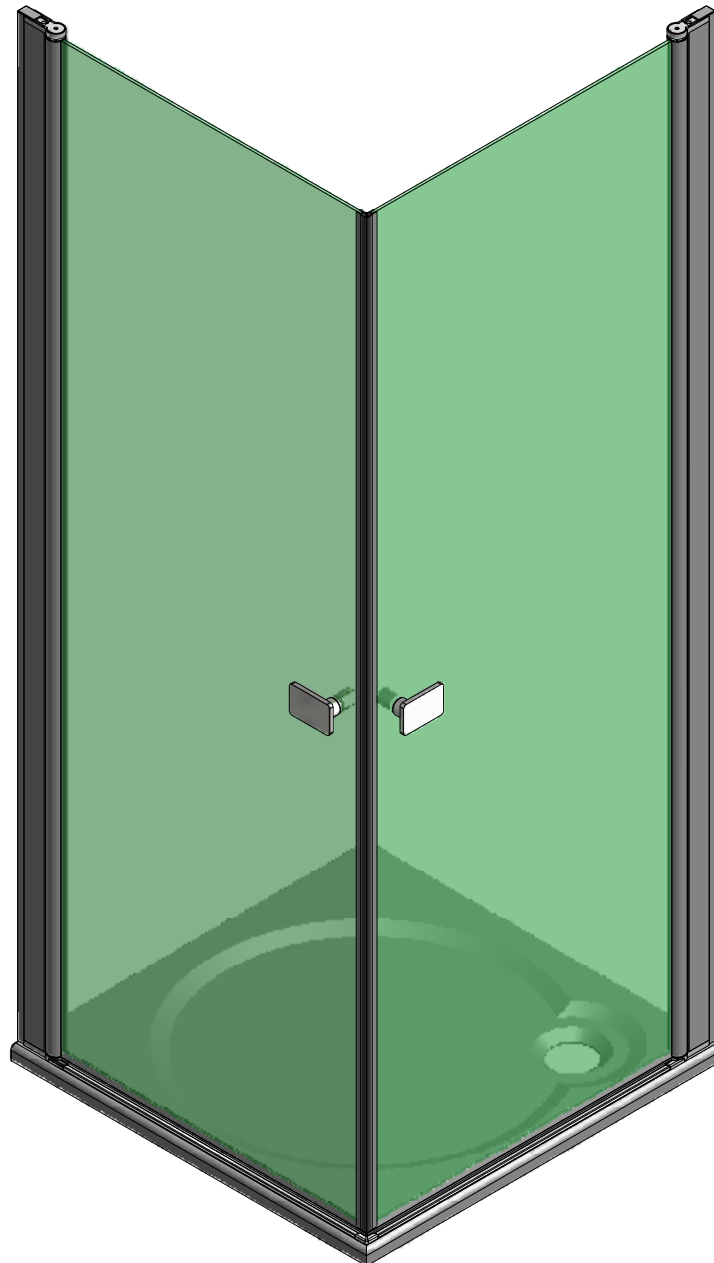


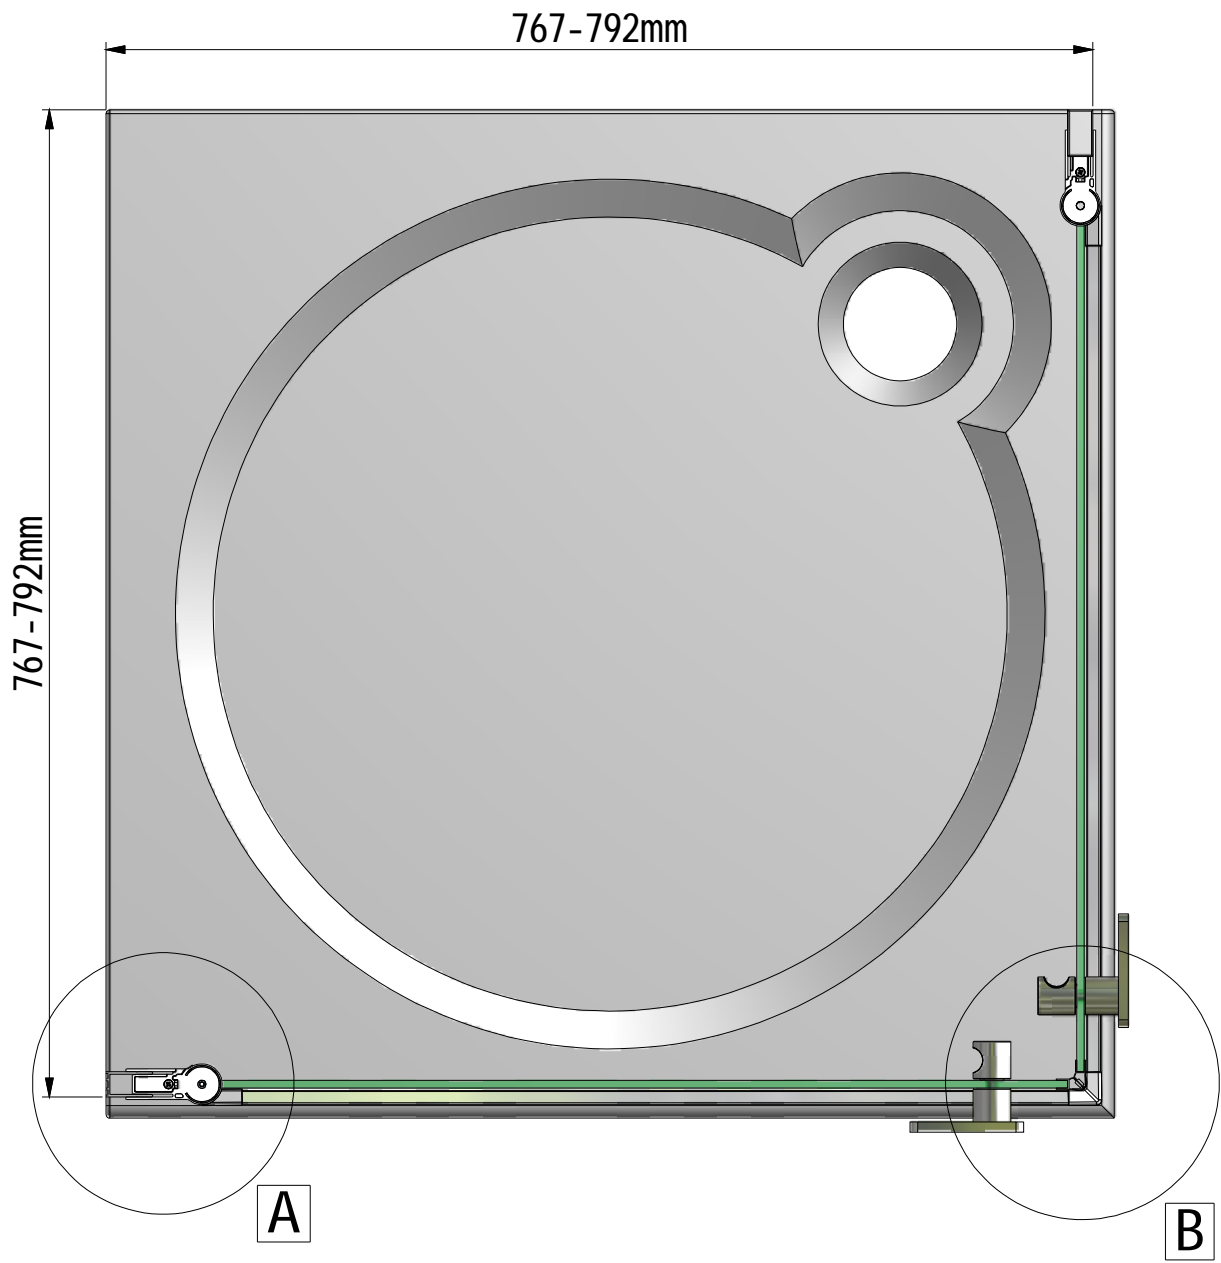


A (1 : 2)

B (1 : 2)

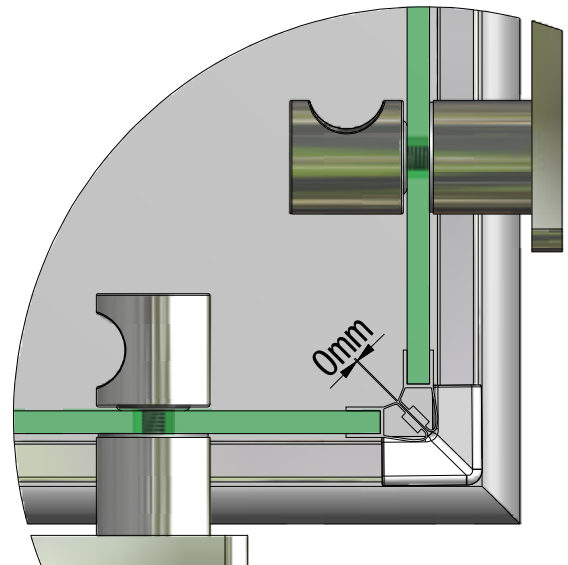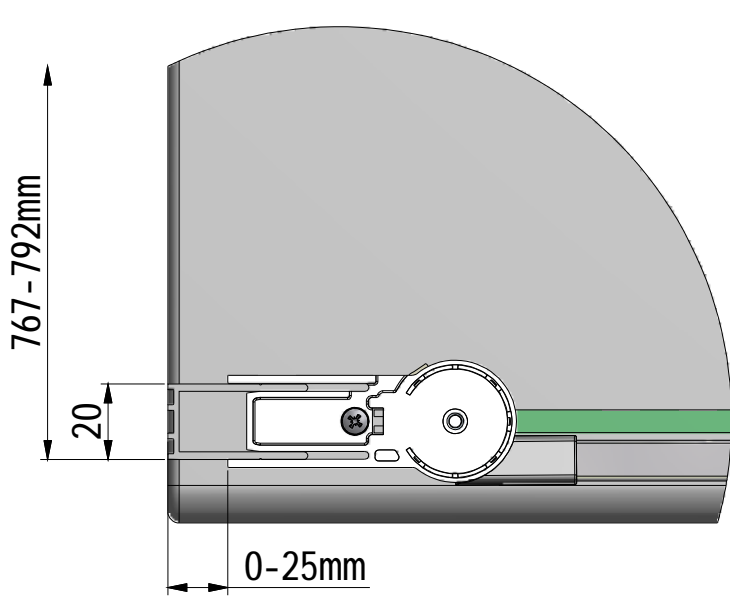

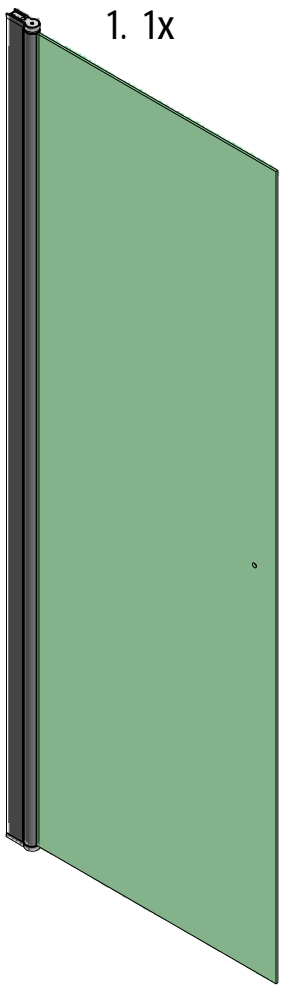

21. 1x
M8538



20. 1x
MA5192




2. 1x
P2388



3. 1x
MA0854




19. 1x
MA0853



4. 1x
P4035



5. 5x
M0511

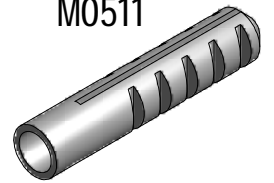

6. 5x
M0811



7. 5x
M0768




8. 3x
M0806




9. 3x
M1907




13. 1x
P2997

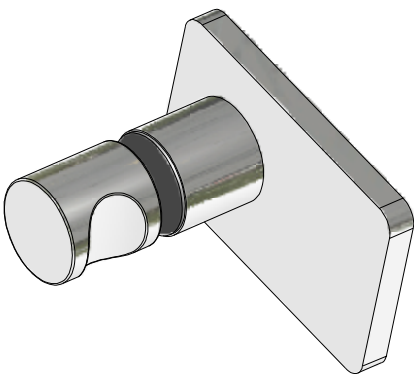


10. 1x
M0750

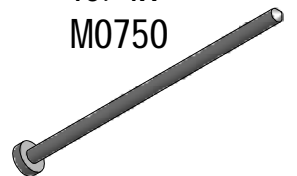


11. 1x
M0513

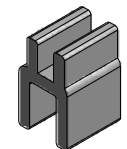


12. 1x n2,8
M0838

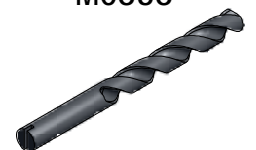


15. 1x
M8317

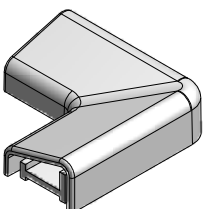


16. 1x
M8312

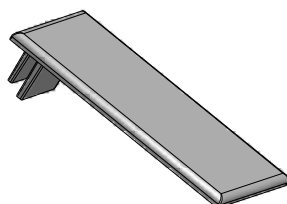


17. 1x
M8309






18. 1x
M8316



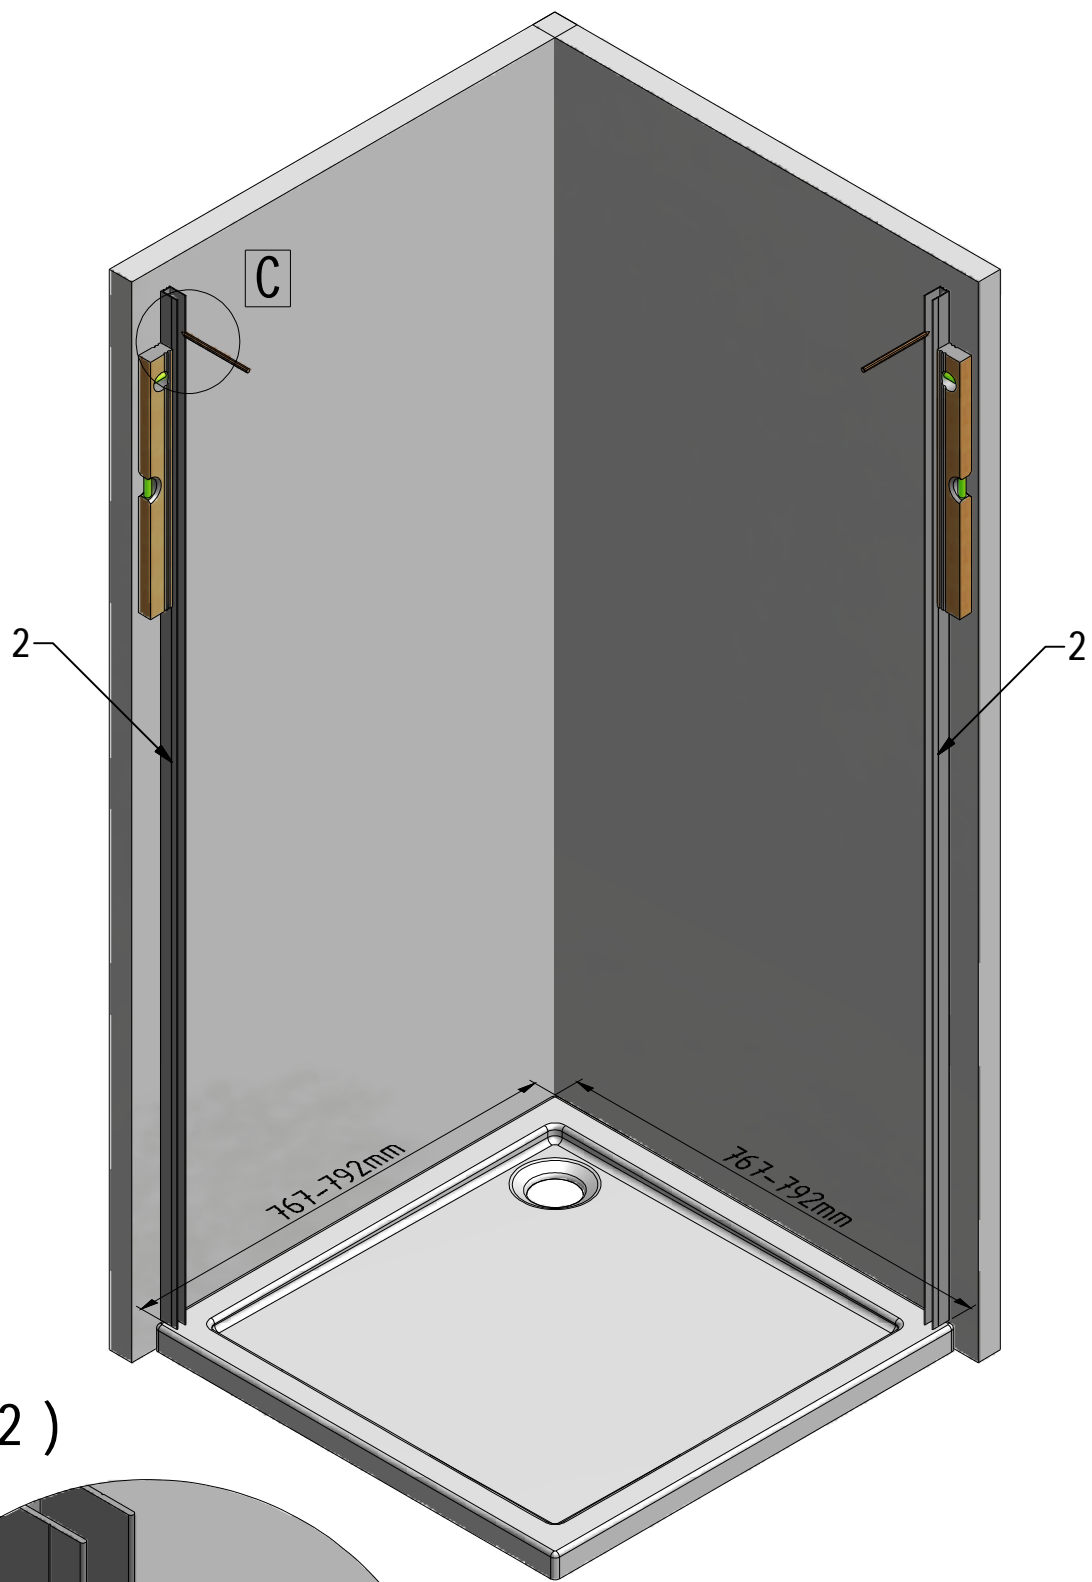


C (1 : 2)

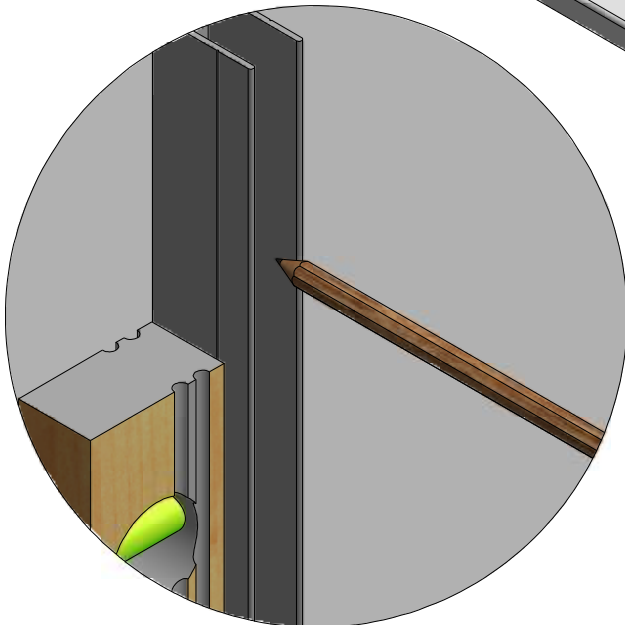


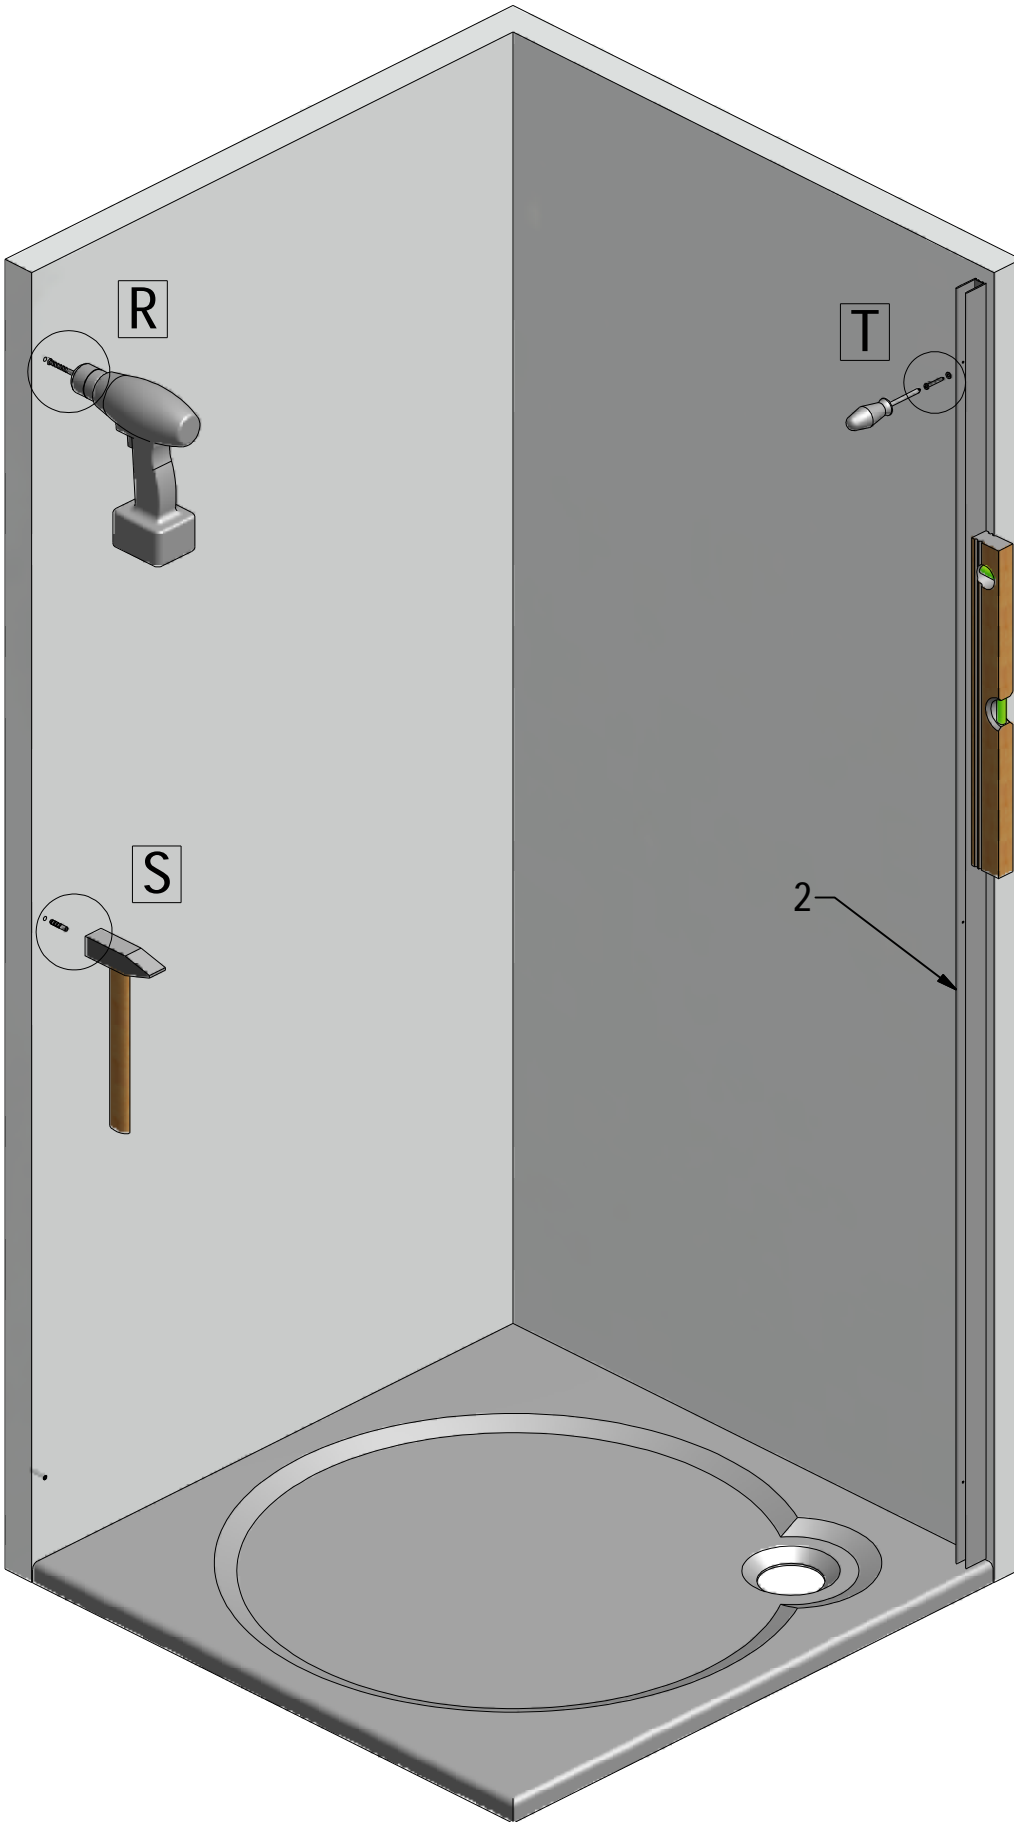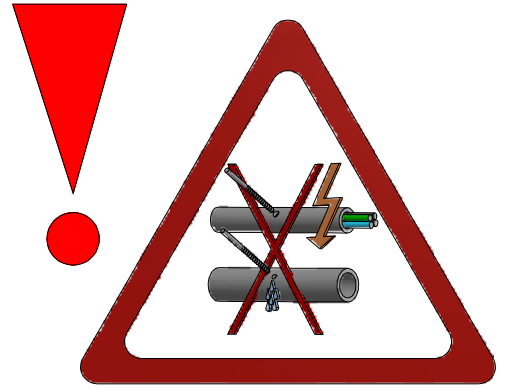


R 6x



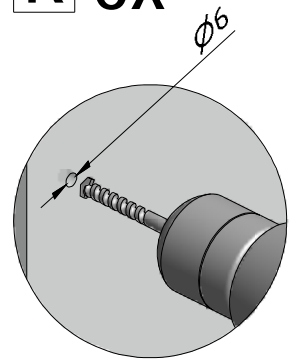





S 6x





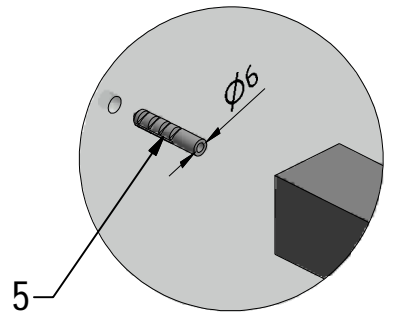







T 6x

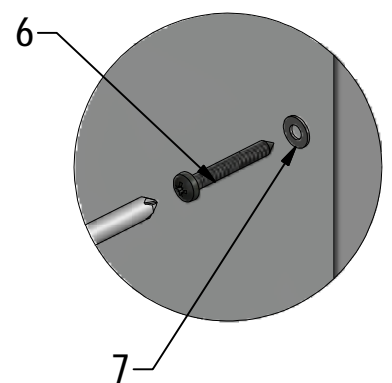


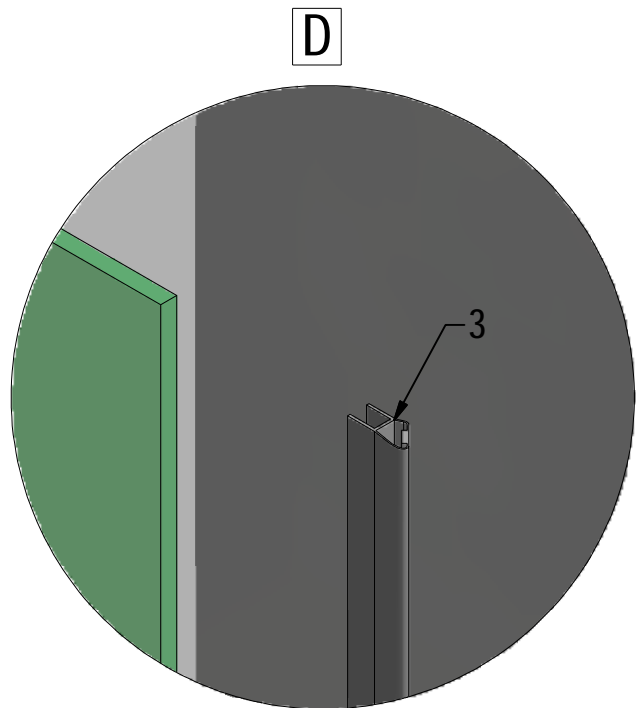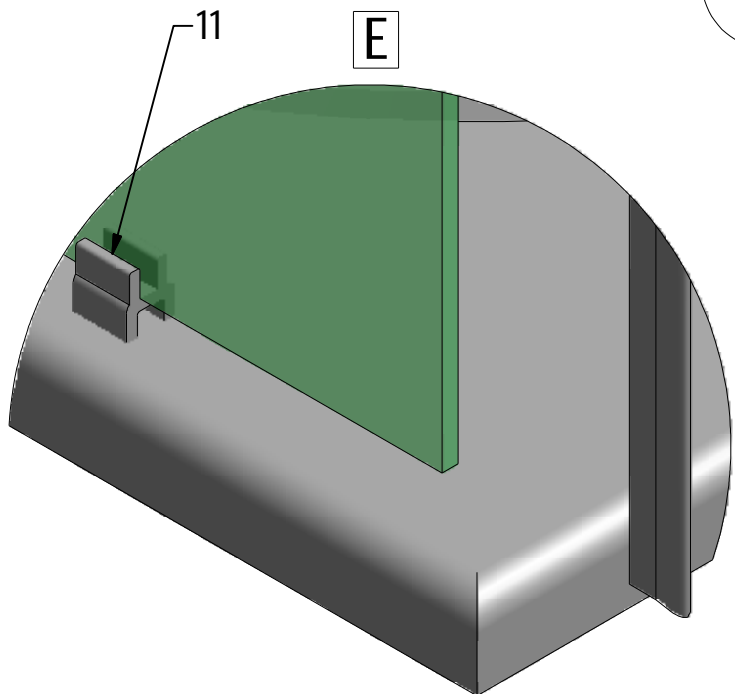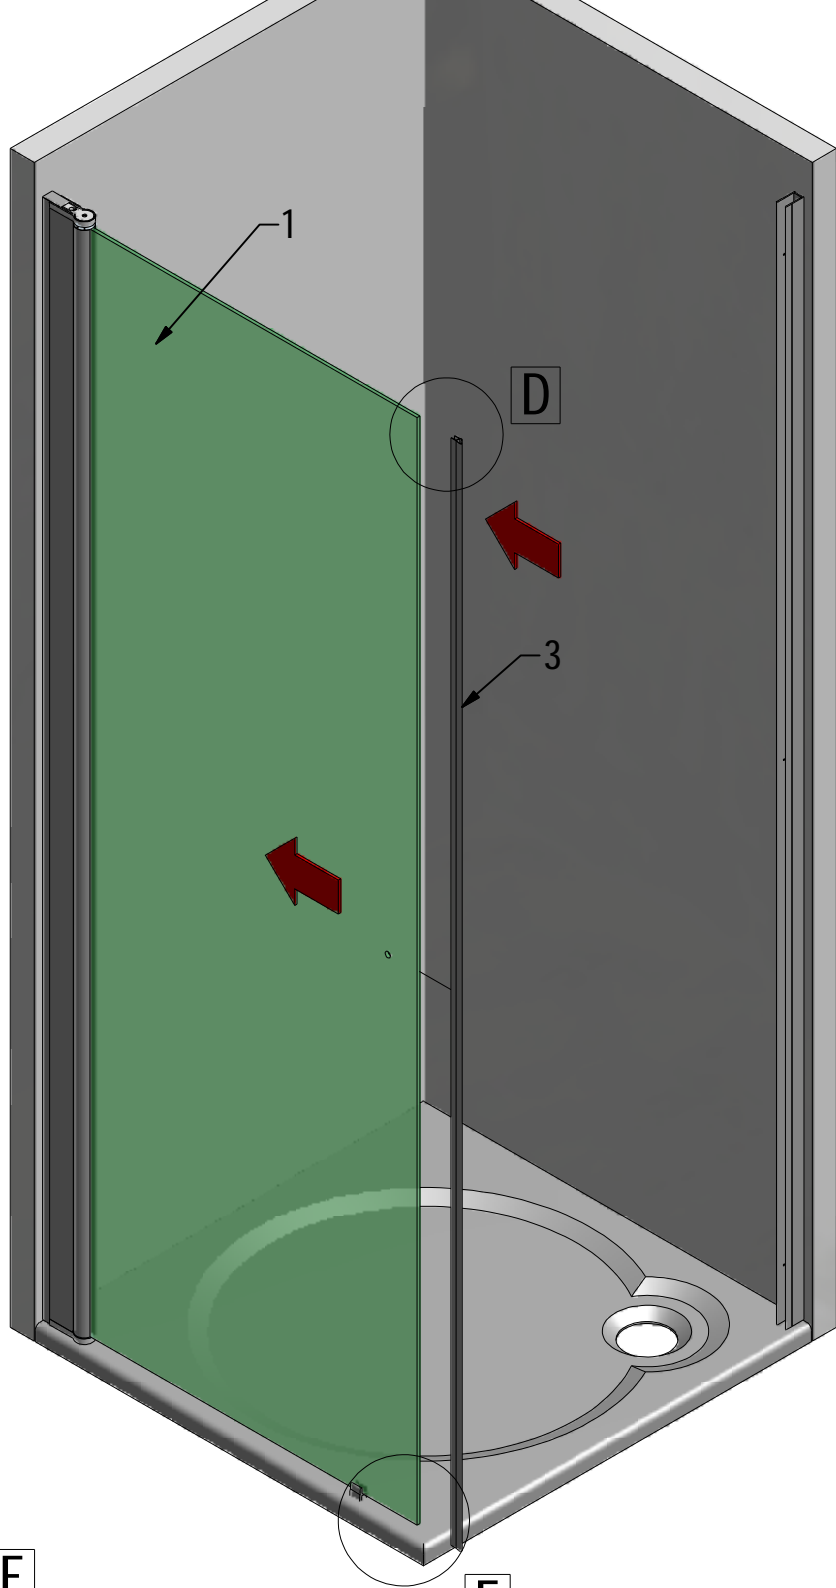

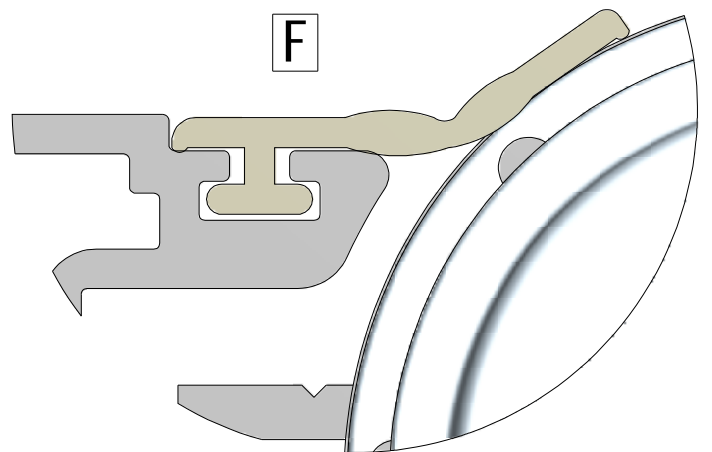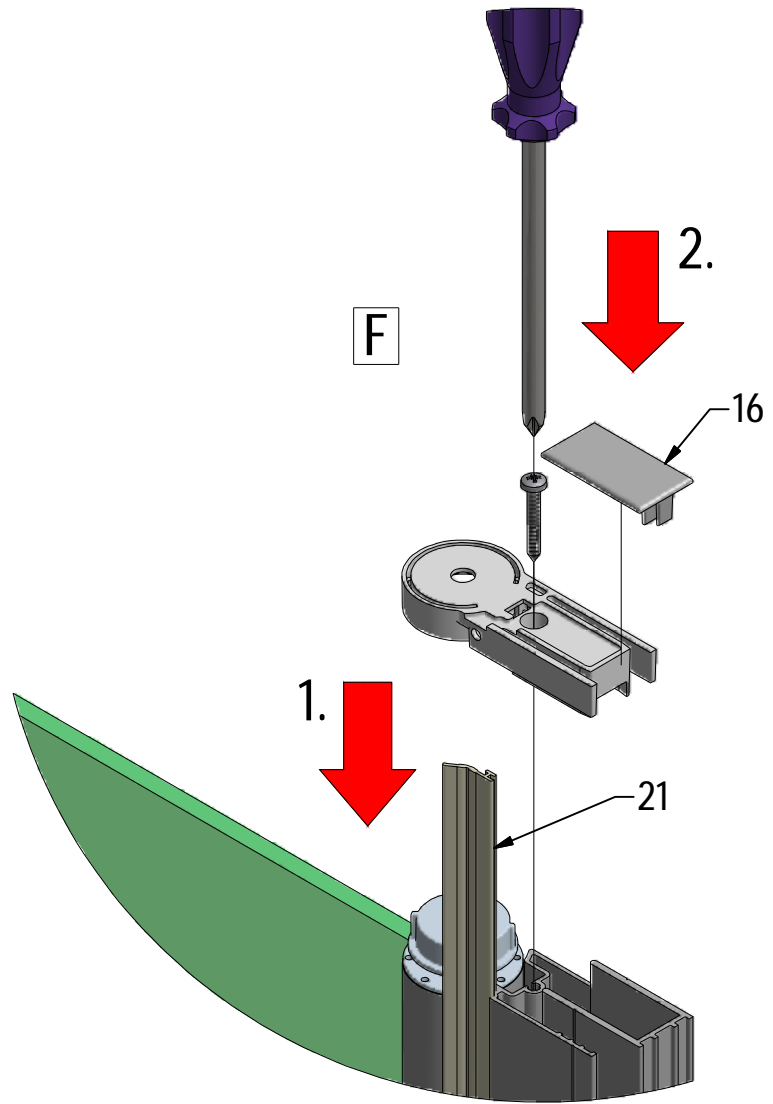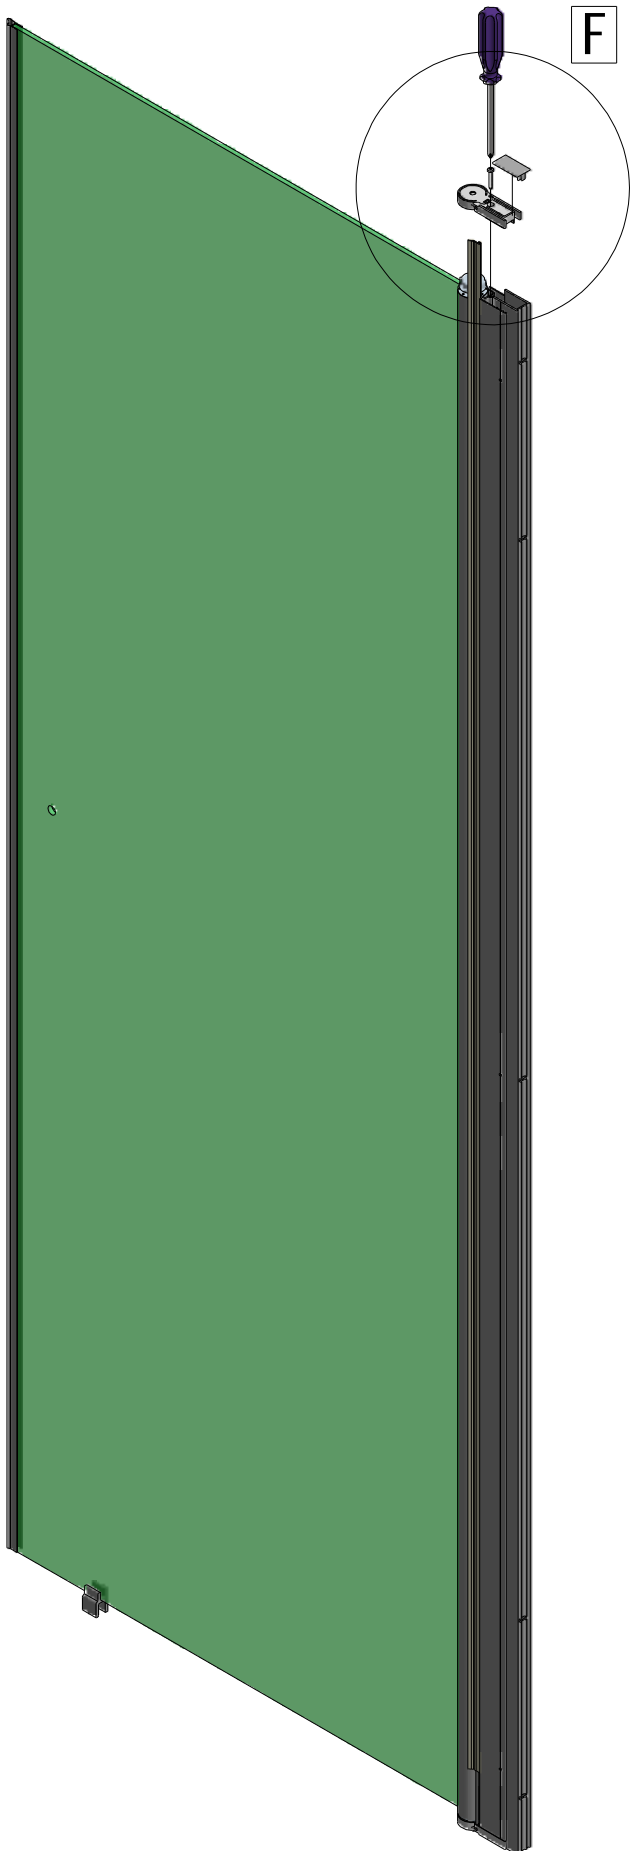

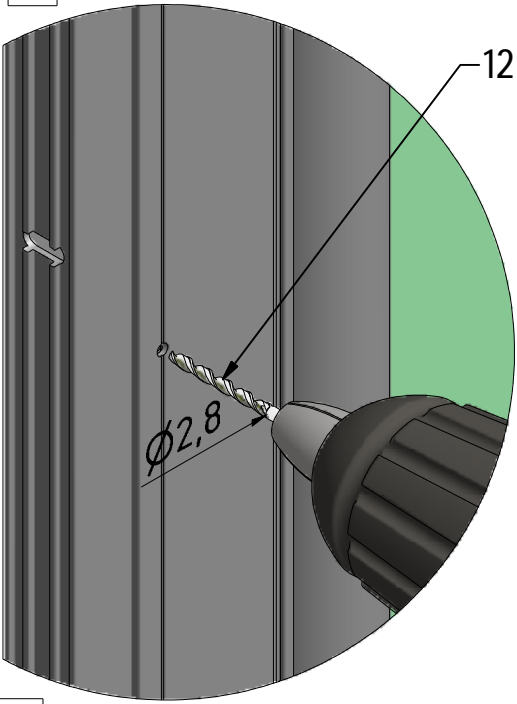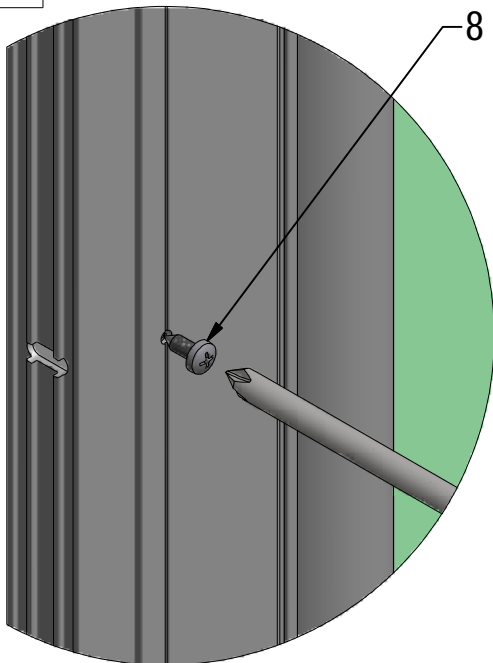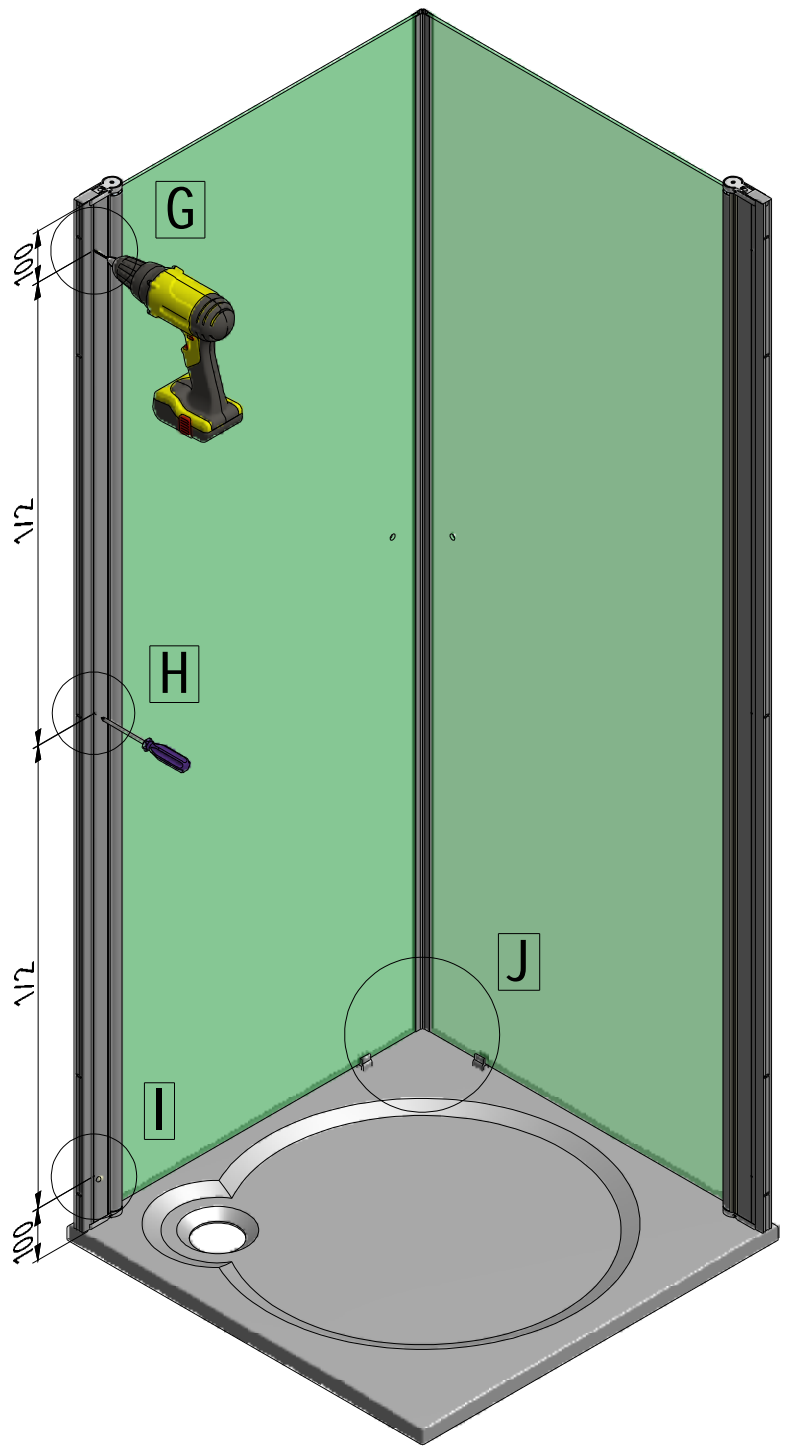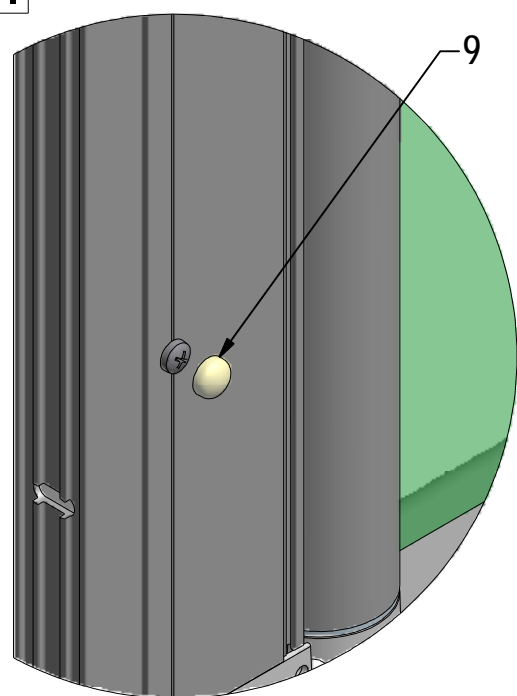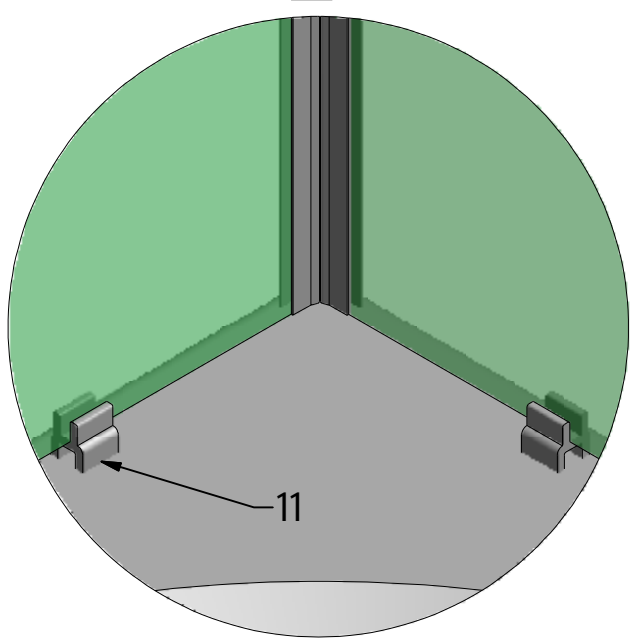G**H****I****J**

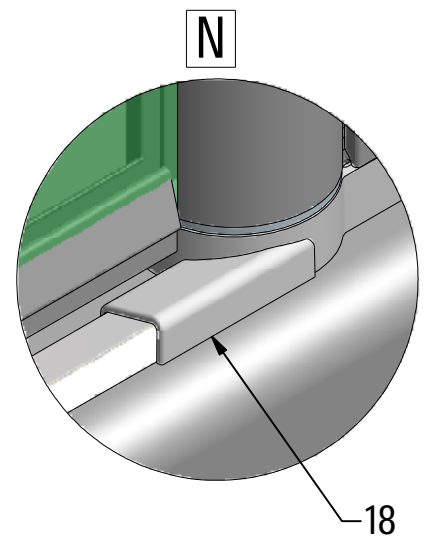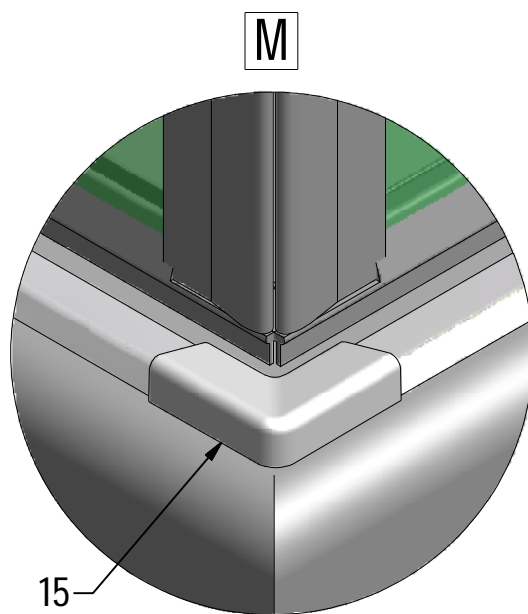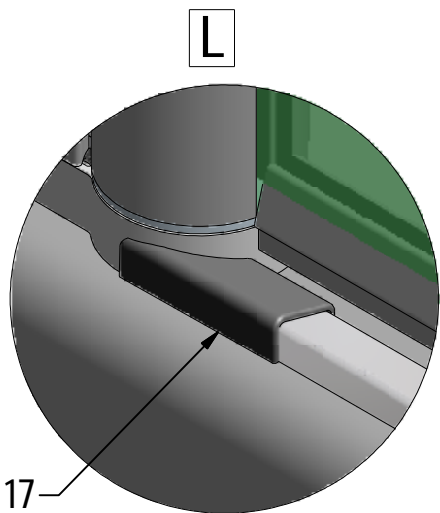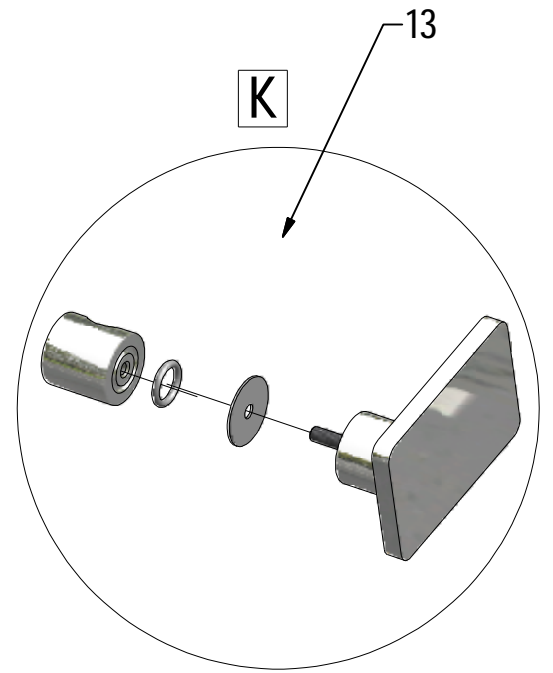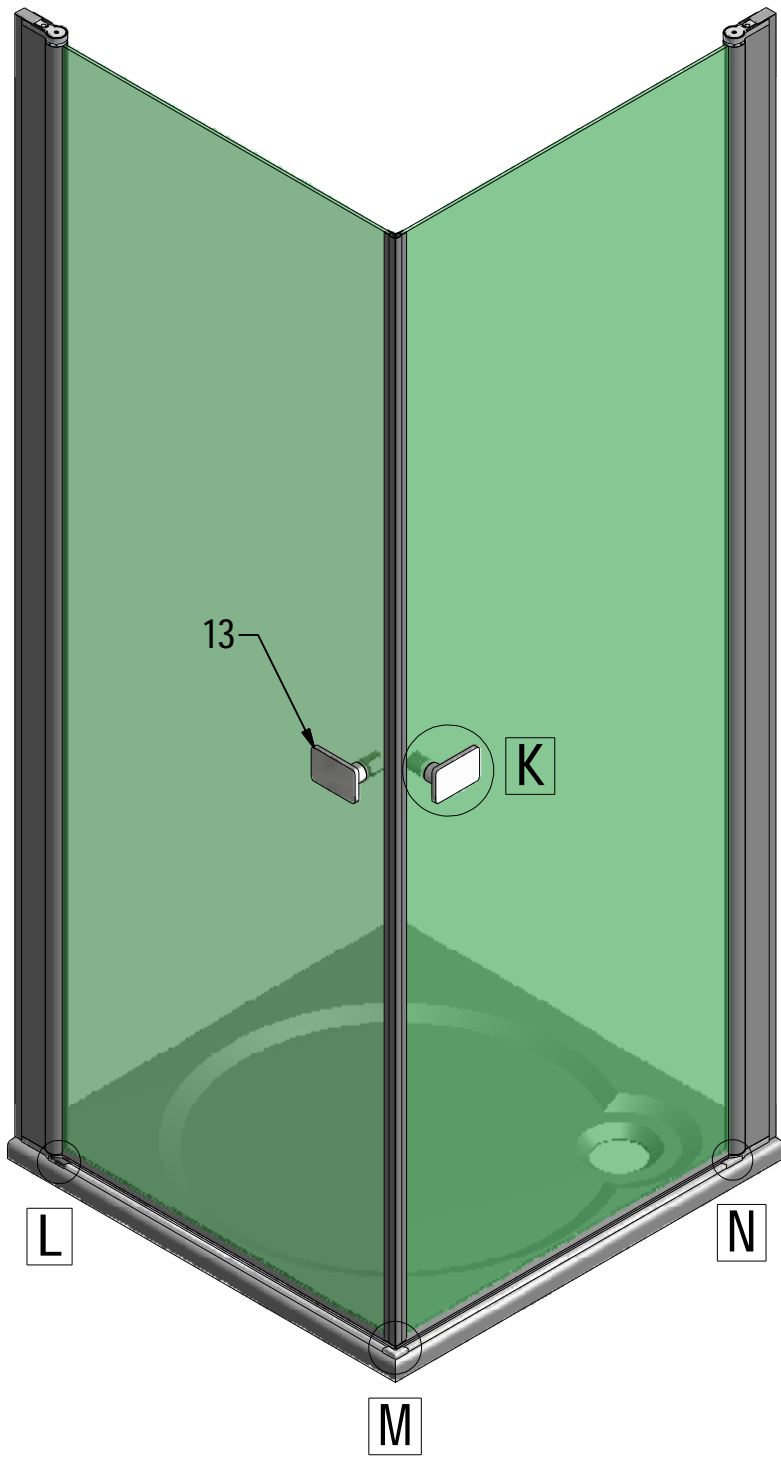


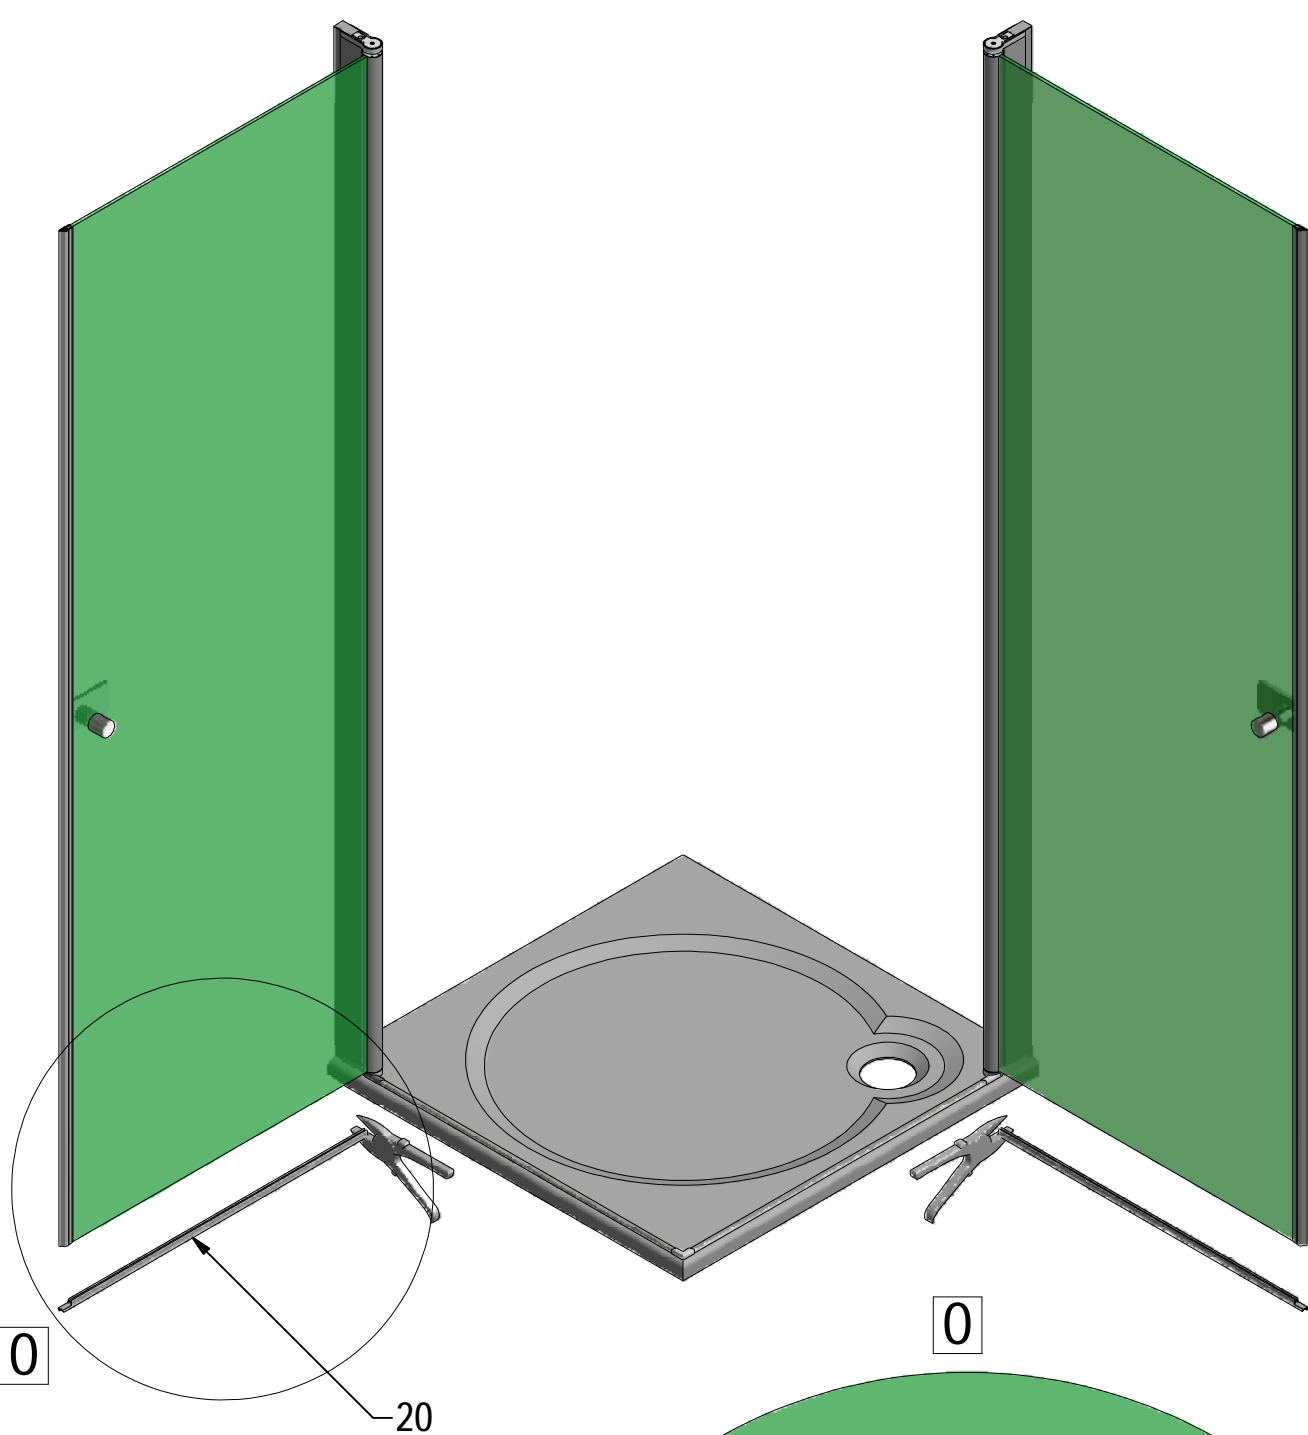

0


0

20

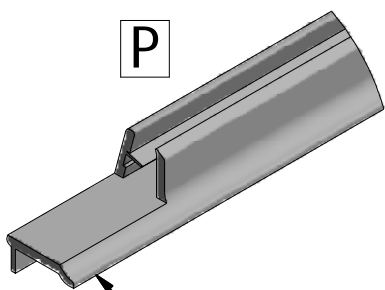



P


-FROM INSIDE OF
SHOWER ENCLOSURE
-Z VNITŘNÍ STRANY
SPRCHOVÉHO KOUTU

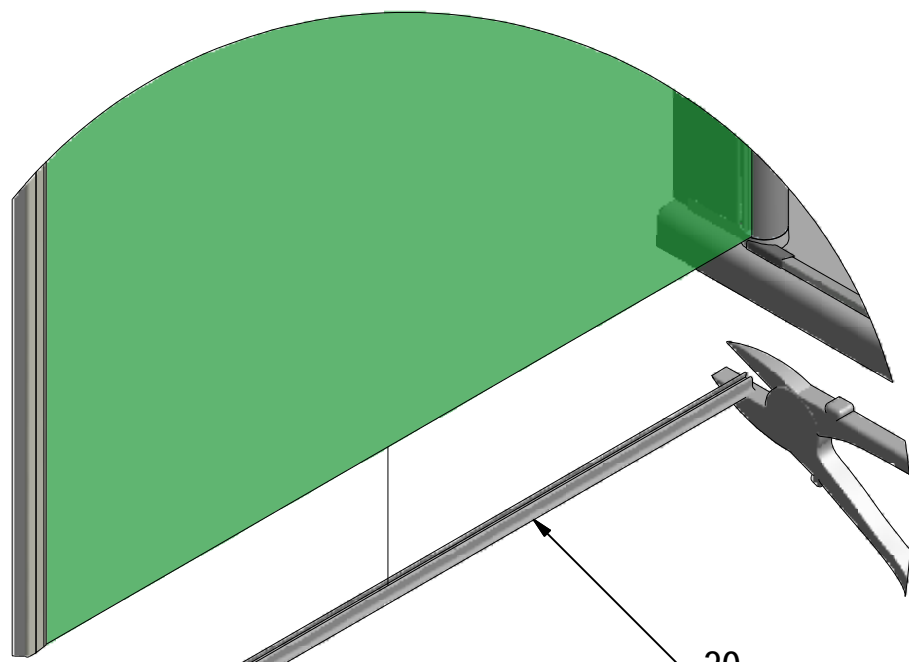

20

P

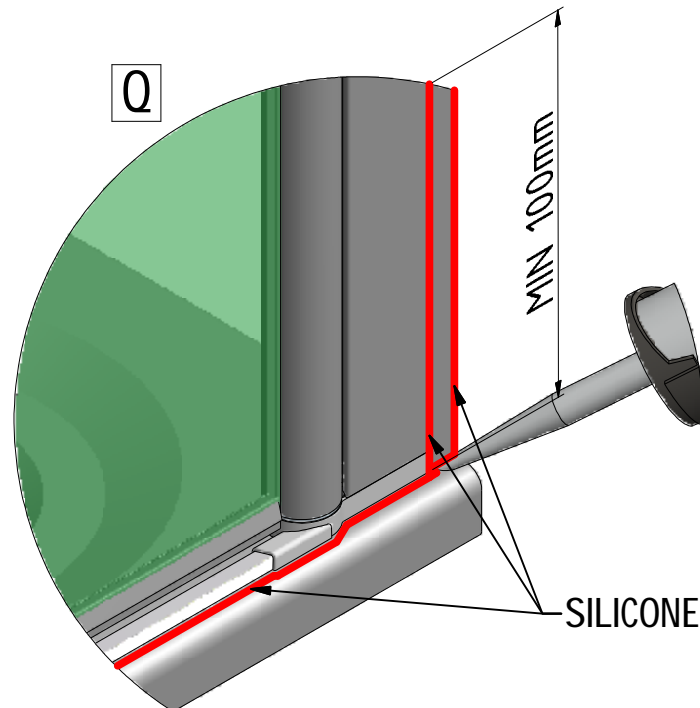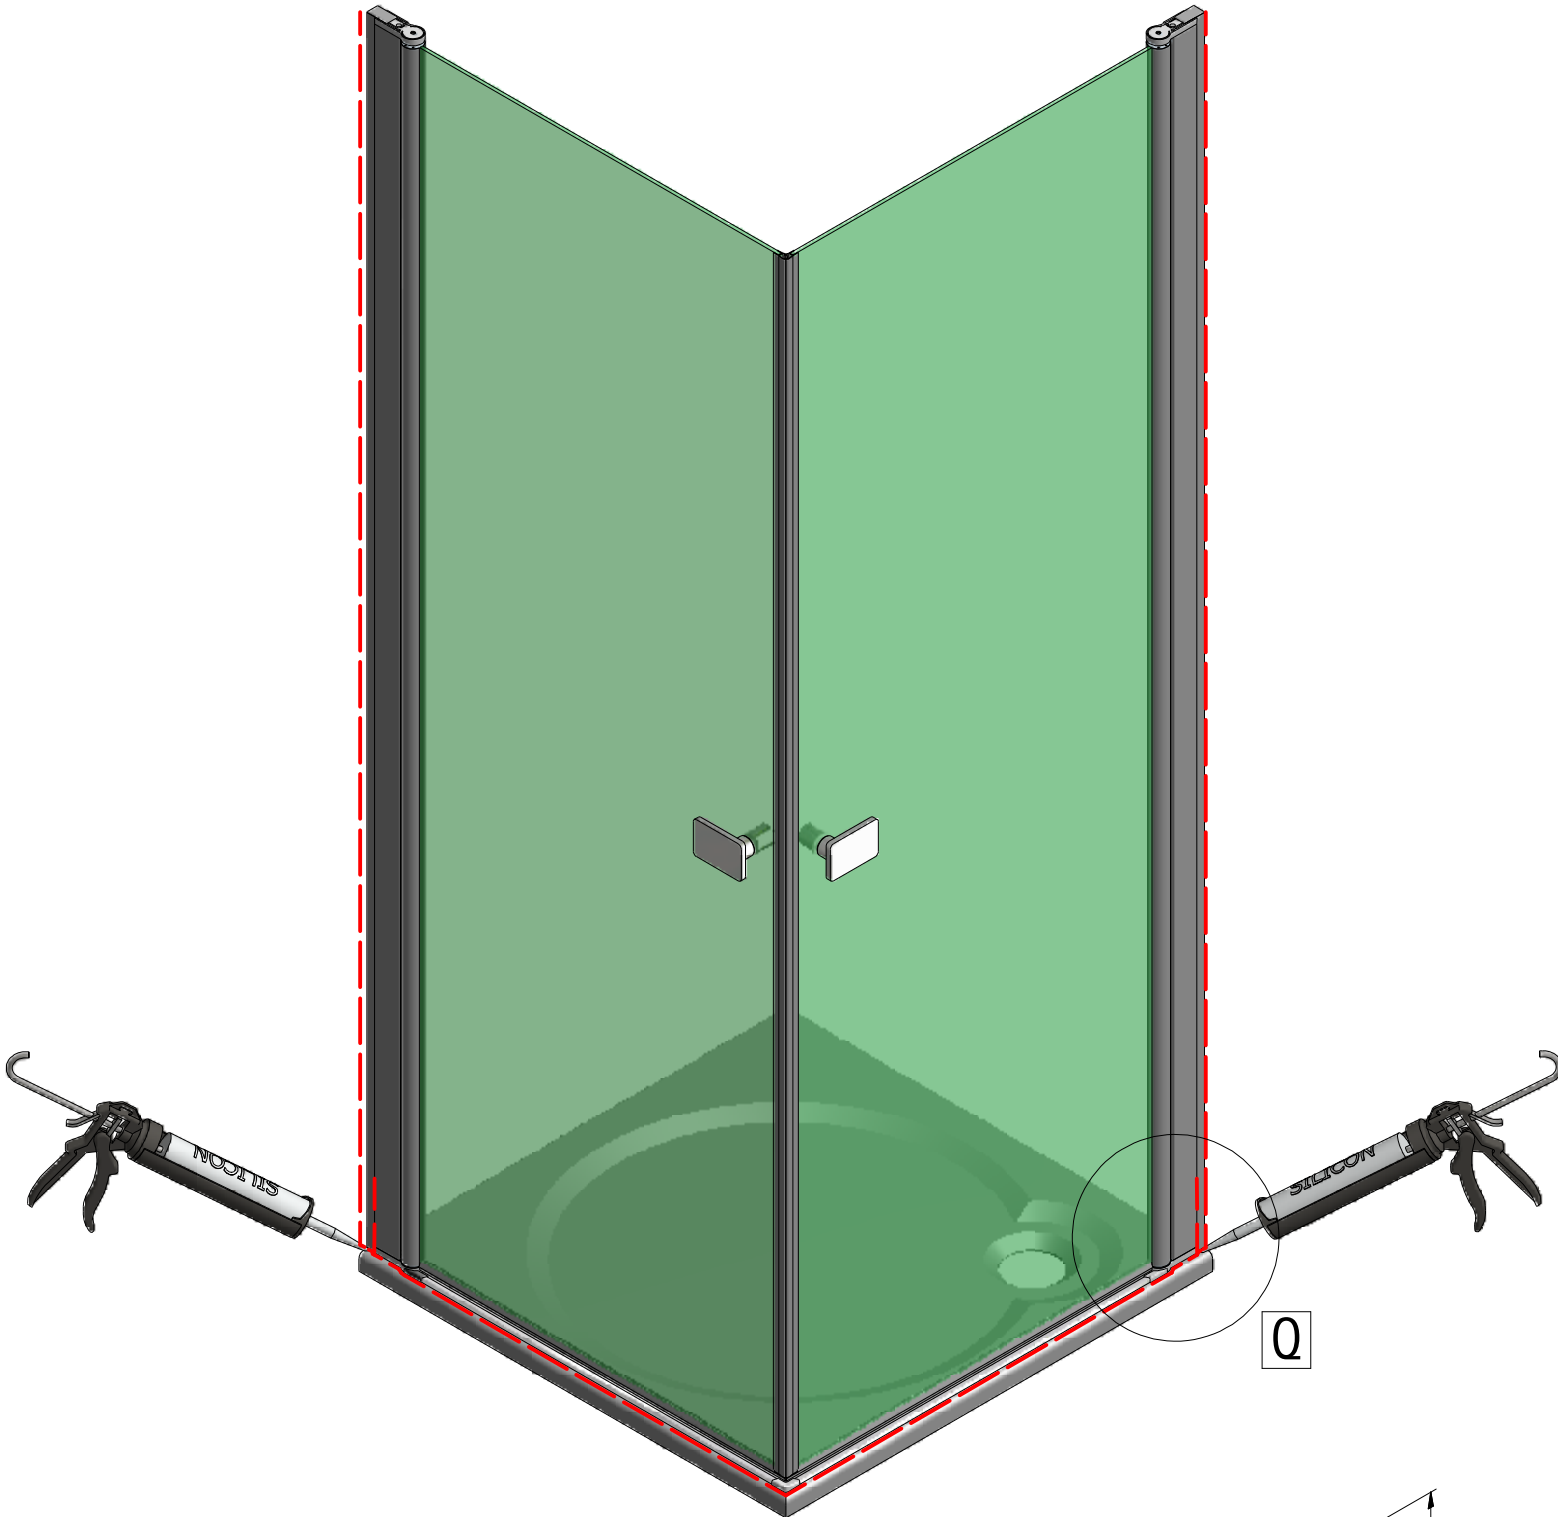

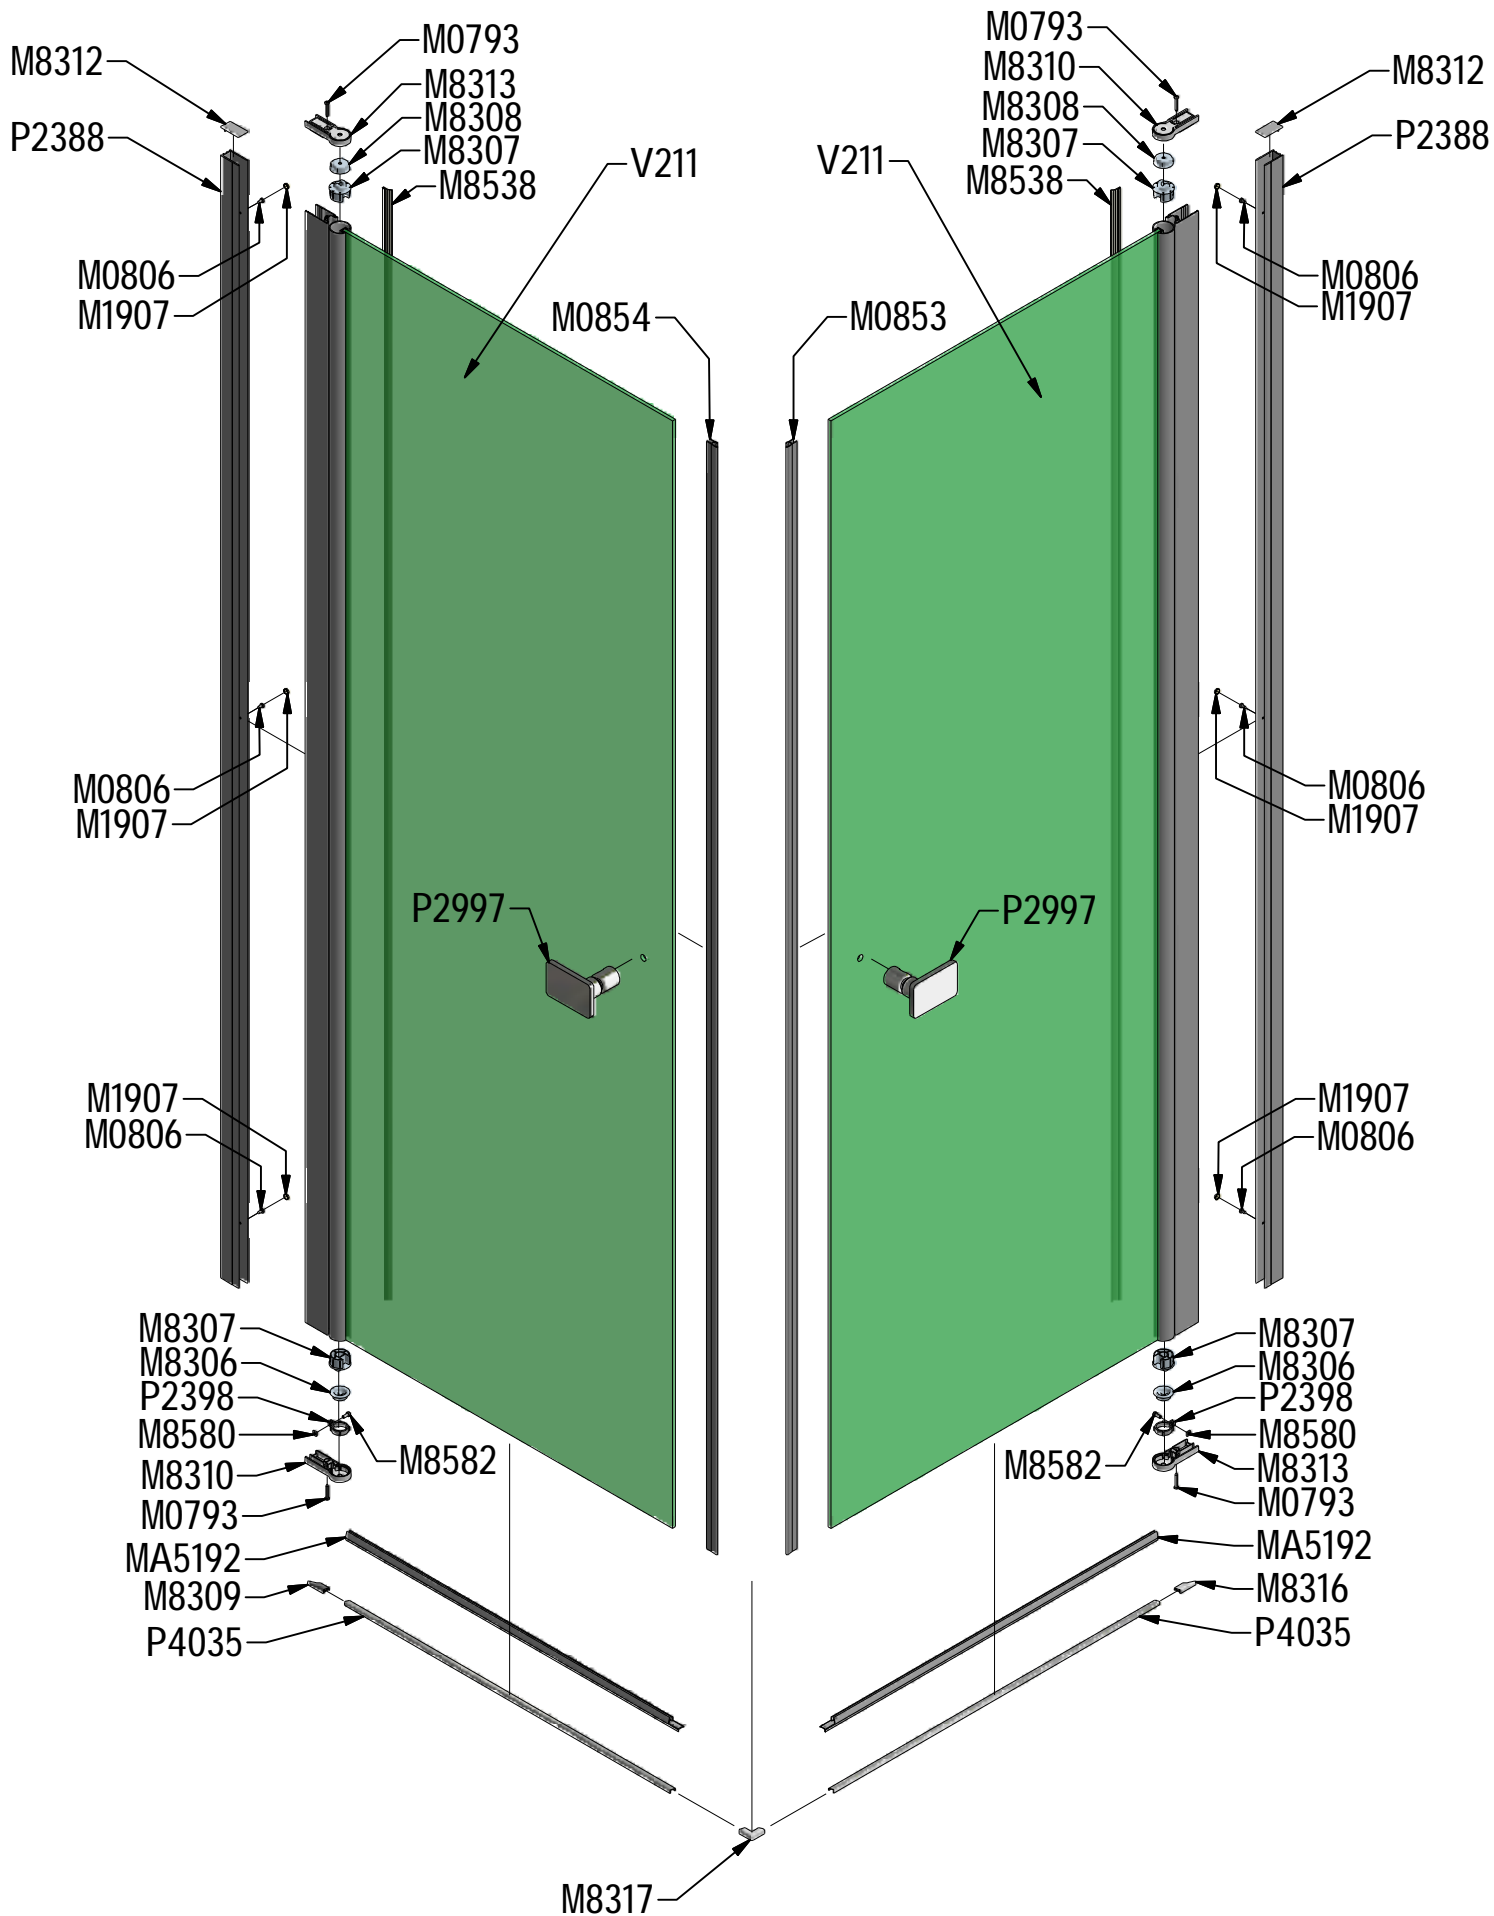

V211	800	elox+clear glass	ND02-0783-01-02
		brillant+clear glass	ND02-0784-00-02